



# Model 10AB/APRB Automatic Dishwasher

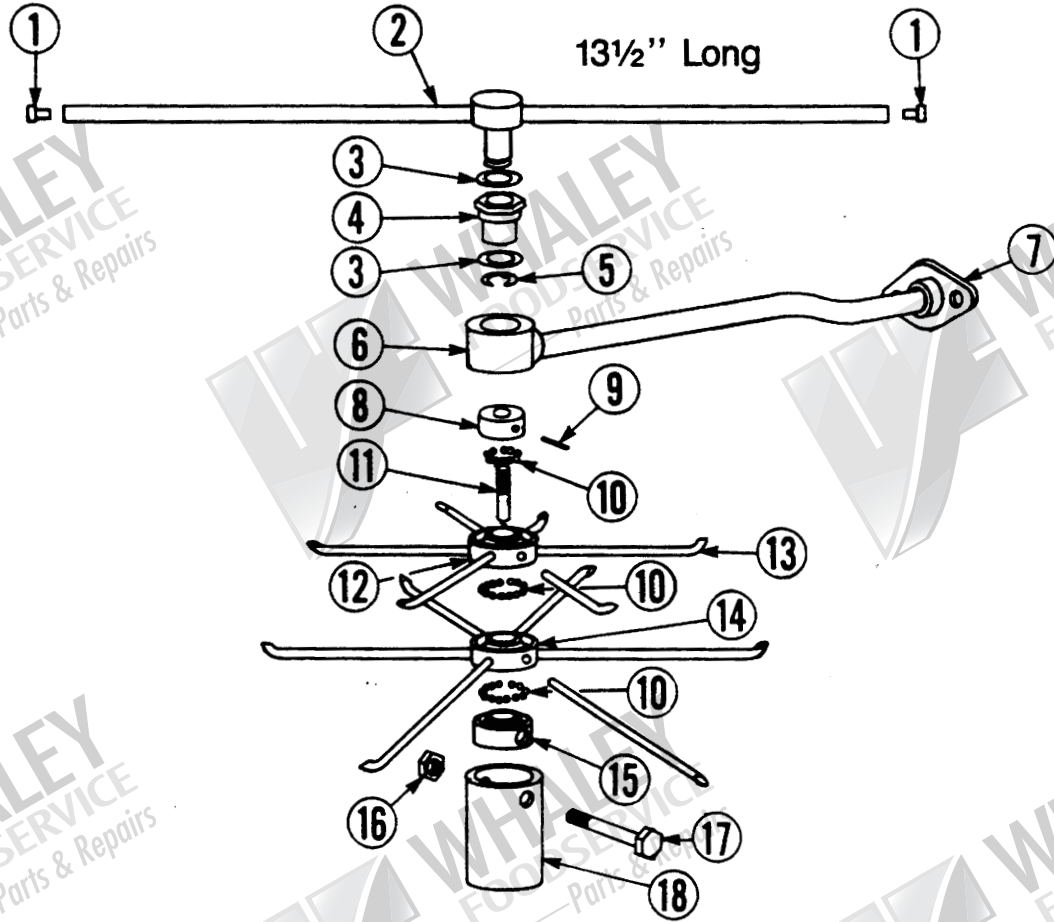

## Rinse and Wash Head Assemblies

ITEM NO.	PART NO.	DESCRIPTION
1	0126800	End Plug
2	0125000	Rinse Arm Body (only)
3	0126000	Nylatron Washer (2 places)
4	0125500	Hex Nut
5	0126500	Snap Ring
6	0130000	Lower Rinse Feed Pipe
7	5700-000-16-47	Rinse Feed Pipe Flange
8	0186500	Wash Cap
9	0187000	Wash Cap Set Screw

ITEM NO.	PART NO.	DESCRIPTION
10	0194004	Ball Bearings (pk. of 25 - 3 places)
11	0187500	Center Shaft
12	0192500	Small Manifold
13	0194500	Spray Tube (12 places)
14	0193000	Large Manifold
15	0193500	Fixed Race
16	0044700	Holding Nut
17	0188500	Holding Bolt
18	Please Call	Wash Head Base
19	0130500	Gasket

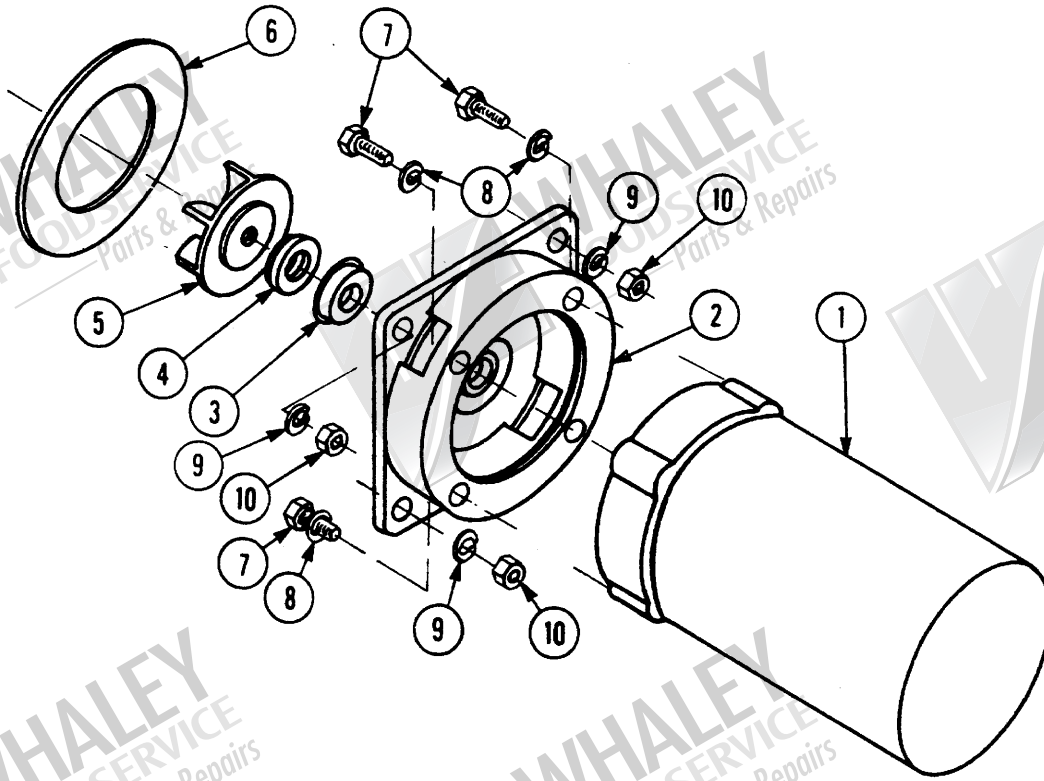

**Pump and Motor Assembly**

ITEM NO.	PART NO.	DESCRIPTION
1	0086000	Pump Motor
2	0088000	Pump Mounting Plate
3	0089000	Pump Ceramic Face with Retainer Cup
4	0087500	Pump Impeller Seal
5	0089500	Pump Impeller

ITEM NO.	PART NO.	DESCRIPTION
6	0090000	Pump Mounting Gasket
7	0090500	Pump Plate to Motor Mounting Bolts
8	0091000	Mounting Plate Lockwashers
9	0091000	Pump Mounting Plate to Base Lockwashers
10	0091500	Pump Mounting Plate to Base Nuts



**General Parts List**

<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>SERIAL NUMBERS</b>
0005400	Booster Tank for Machine (Stripped) AB	AF28,000
0005800	Booster Tank for Machine (Stripped) APRB	AF 28,000
0012000	Circuit Breaker, 15 AMP (Specify Number from Part)	Specify
0016300	Control Box Complete Wired A	AF 28,000
0016600	Control Box Complete Wired AB	AF 28,000
0016900	Control Box Complete Wired APR	AF 28,000
0017200	Control Box Complete Wired APRB	AF 28,000
0021100	Control Box (Stripped) Only	AF 24,451
0024200	Control Box Front Panel Wired A	AF 28,000
0024500	Control Box Front Panel Wired AB	AF 28,000
0024800	Control Box Front Panel Wired APR	AF 28,000
0025100	Control Box Front Panel Wired APRB	AF 28,800
0028000	Control Box Bracket (Only)	All
0028400	Control Box Front Panel (Blank)	All
0028700	Control Box, Lower Front Cover (Only)	AF 23,294
0054000	Drain "O" Ring	AF 28,000
0056000	Gauge, Pressure, 0-60, Bottom Connection	(Special Military)
0056100	Gauge, Pressure, 0-15, Panel Mount Rear Connection	(Special Military)
0057000	Heater Element, Immersion, Flange Type, w/Gasket, 220V, 750 Watt	AF 28,000
0058500	Heater Gasket, Immersion Element, Flange Type, Above	All
0058700	Heater Socket Only, for Heater Element Removal, Screw Plug Type	Tool
0058800	Heater Bus Bars, 3-Hole	All
0059000	Heater Element, 115V, 1500 Watt Screw In	
0059300	Heater Bus Bars, 2-Hole	All
0060400	Heater Box Front/Bottom Cover	AF 24, 451
0060500	Heater Element, Immersion, Screw Plug Type, 208-203V, 250 Watt	All
0061000	Heater Element, Immersion, Screw Plug Type, 254V, 2600 Watt	All

<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>SERIAL NUMBERS</b>
0062500	Hood Assembly, Standard, Complete (Includes Hood Support Pipe; Coarse Thread, and Upper Rinse, Internal Vacuum Pipe)	AF 21,086
0063500	Hood Assembly, 5" Taller, Complete (Includes Hood Support Pipe; Coarse Thread, Upper Rinse, Internal Vacuum Pipe)	Special AF 21,086
0064000	Hood Only, Standard	AF 17,590
0065000	Hood Only, 5" Taller	Special
0065500	Hood Washer, SS	All
0066000	Hood Washer, Fiber	All
0066500	Hood Washer, Teflon	All
0067000	Hood Spanner Locknut	All
0067200	Hood Spanner Nut Wrench Tool	All
0067500	Hood Spanner Lockwasher	All
0051000	Hood Handle w/Gaskets and Screws	All
0068400	Hood Support Pipe Assembly, Standard Height, Coarse Thread	AF 21,086
0069500	Hood Support Pipe Assembly, 5" Taller (Specify Thread on Nut)	Special
0070000	Hood Support Block, Brass, Coarse Thread	AF 21,086
0071000	Hood Support Block Gasket, Rectangular	All
0071500	Hood Support Pipe Hex Nut Only, Coarse	AF 21,086
0071600	Hood Support Nut Wrench	All
0072500	Hood Support Pipe Metal Washer	All
0073000	Hood Support Pipe Rubber Washer	All
0073500	Hood Support Pipe "O" Ring	All
0074000	Hood, Internal Vacuum Breaker Pipe, Standard	AF 24,451
0075000	Hood, Internal Vacuum Breaker Pipe, 5" Taller	Special
0083500	Light Indicator, Heater Overload	AF 23,294
0084300	Probe: Small Lundy	AF 28,000
0084500	Probe: Large Warrick Hi-Level (APRB Only)	All

<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>SERIAL NUMBERS</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>SERIAL NUMBERS</b>
0084700	Probe: Cover Rubber (for 0084500) (APRB Only)	All	0121000	Relay, 200V, 2-Pole, Hot Water (Used on Wash Heat Circuit)	—
0085000	Pump Assembly Complete w/Motor, 1/2 HP, 3450 RPM	AF 24,451	0122000	Relay, 220V, 2-Pole, Hot Water (Used on Rinse Heat Circuit, Single-Phase)	AF 24,451
0086000	Pump Motor 115/230V, 1/2 HP, 3540 RPM, Jet	AF 24,451	0123000	Relay, 220V, 3-Pole, Hot Water (Used on Rinse Heat Circuit, Three-Phase)	AF 24,451
0087500	Pump Seal (for Pump Parts 850-863-920-925)	All	0125000	Rinse Head Assembly, Upper and Lower Interchange - 13-1/2" Long	All
0088000	Pump Mounting Plate (for Pump Parts 850-863)	AF 24,451	0125500	Rinse Head Hex Bushing	AF 22,734
0089000	Pump Ceramic Face with Retainer Cup (for Pump Parts 850-863-920-925)	All	0126000	Rinse Head Nylatron Washer	AF 22,734
0089500	Pump Impeller 2-3/4" Diameter 7/16" Tap (for Pump Parts 850-863)	AF 24,451	0126500	Rinse Head Snap Ring, SS	AF 22,734
0090000	Pump Gasket (for Pump Parts 850-863) (Mounting)	All	0127000	Rinse Head Plus (Slotted)	AF 22,734
0090500	Pump Bolts (for Pump Parts 850-863)	AF 24,451	0127500	Rinse Head Laminated Washer	BF 22,734
0091000	Pump Lockwashers (for Pump Parts 863-862-920-925)	All	0130000	Rinse Head, Lower Feed Pipe	All
0091500	Pump Nuts (for Pump Parts 863-862-920-925)	All	0130500	Rinse Head Oval Gasket (for 1300)	All
0110000	Rack Support Rod Assembly	All	0131000	Rinse Head Brush, Tube Cleaning	All
0111500	Rack, Oven Type (Cup, Bowl and Glass), Molded	For Model 10 (JO)	0141500	Scrap Block (for Tables)	All
0112000	Rack, Peg Type (Dish), Molded	For Model 10 (JP)	0142000	Solenoid Valve, 1/2", 110V, JE	AF 18,000
0112500	Rack, Compartment Type (Glass), Molded	For Model 10 (JO-3)	0142500	Solenoid Valve, 1/2", 220V, JE	AF 18,000
0113000	Rack, Four-Compartment Basket (Silverware), Molded	All Models (J4)	0143500	Solenoid Valve Coil, 110V, JE (for 1/2" and 3/4")	AF 18,000
0113500	Rack, Eight-Compartment Basket (Silverware), Molded	All Models (P4C8)	0144000	Solenoid Valve Coil, 220V, JE (for 1/2" and 3/4")	AF 18,000
0113600	Rack, Twelve-Compartment Basket (Silverware), Molded	All Models (P4C12)	0145000	Solenoid Valve Diaphragm Cartridge, and "O" Ring, JE, 1/2"	AF 18,000
0118400	Rack, Square, Molded with Stainless "H" Bar (20" x 20" Sinks, Dishtables)	—	0147500	Solenoid Valve "O" Ring, 1/2", JE	AF 18,000
0118500	Regulator, Pressure, 1/2" Walls	All	0148500	Solenoid Valve, Plunger Assembly, for 1/2" and 3/4", JE	AF 18,000
0119500	Regulator Repair Kit, Pressure, 1/2" Walls	All	0149500	Solenoid Valve, Strainer Screen, 1/2", JE	AF 18,000
			0150500	Strainer, Large Overflow	AF All
			0151000	Strainer, Small Pump Intake	All
			0153600	Strainer, "Y", 1/2"	All
			1054000	Switch, Rinse/Fill (All) (SPDT) Momentary Slip Disconnect	AF 24,451
			0155500	Switch, Manual Wash (DPDT) Slip Disconnect	AF 24,451
			0157500	Switch, Master (DPST) (All) Slip Disconnect (Used on Wash, Heat and Conveyor on 39's)	AF 24,451



**General Parts List (cont.)**

<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>SERIAL NUMBERS</b>
0157500	Switch, Heat (DPST) (All) Slip Disconnect	AF 24,451
0162500	Switch, Start (SPDT) (All) Slip Disconnect	AF 24,451
0165500	Terminal Board, 3-Pole, Complete (Three-Phase)	All
0166500	Terminal Board, 2-Pole, Complete (Single-Phase)	All
0167000	Terminal Board, 9-Pole, Complete Slip Terminal	AF 24,451
0169100	Thermometer, Wash or Rinse, Standard	All
0169300	Thermostat Box, Complete, w/o Wash Heater Overload	AF 28,000
0169800	Thermostat Sheath or Cover	—
0170000	Thermostat, Standard	All
0170500	Timer, 115V with Wires and Mounting Plate	All
0170600	Timer, 220V with Wires and Mounting Plate	All
0172000	Timer Motor, 115V (for Module-Type Timer)	All
0172500	Timer Motor, 220V (for Module-Type Timer)	All
0177500	Timer Micro Switches, Plastic Module-Type (for Eagle Bliss)	All
0184101	Vacuum Breaker, 1/2" Conbraco	AF 35,373
0184200	Vacuum Breaker Repair Kit, Conbraco	—
0182000	Vacuum Breaker, Poppet for 1/2" and 3/4" Febco	AF 28,000

<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>SERIAL NUMBERS</b>
0182500	Vacuum Breaker, Gasket for 1/2" and 3/4" Febco	AF 28,000
0184600	Vacuum Breaker, Repair Kit, 1/2" Sloan	AF 35,373
0185000	Valve, 1/4" (for Health Inspector's Gauge)	All
0186000	Wash Head Assembly, Complete	AF 19,035
0186500	Wash Head Cap with Race	AF 19,035
0187000	Wash Head Cap Set Screw	AF 19,035
0187500	Wash Head Center Shaft	AF 19,035
0188500	Wash Head Holding Bolt	AF 19,035
0044700	Wash Head Nut for Holding Bolt (Nylon Insert)	AF 19,035
0192500	Wash Head, Small Manifold with Tubes	AF 10,282
0193000	Wash Head, Large Manifold with Tubes	AF 10,282
0193500	Wash Head Fixed Race	AF 10,282
0194004	Wash Head Bearings, 1/4", SS, (qty: 25)	All
0194500	Wash Head Spray Tube Only, Long Length	All
0204500	Water Level Control, Curtis, 110V	AF 23,344
0205000	Water Level Control, Curtis, 220V	AF 23,344
0205500	Water Level Control, Relay Only, Curtis	AF 23,344
0206000	Water Level Control, Printed Board Only, Curtis	AF 23,344
3014900	Overload, Hi-Limit for Wash Heater	—
6020220	Tie Strap, SS	—

